 


SHARP

OPERATION MANUAL

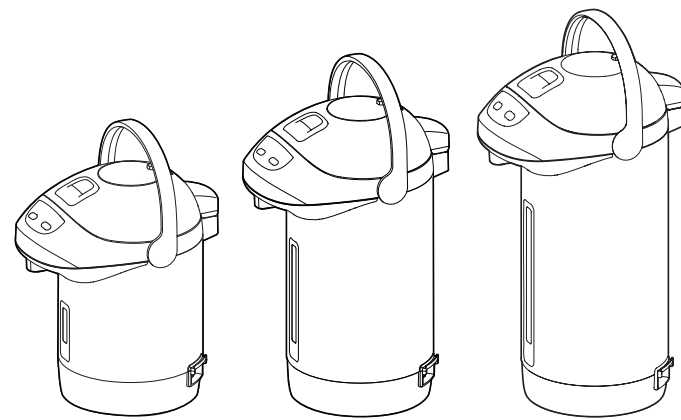

ELECTRIC JAR POT
MODERN WAVE
MODEL KP-B16S
KP-B28S
KP-B36S

CONTENTS

PAGE

USAGE PRECAUTIONS	10-11
DESCRIPTION OF PARTS	12
SPECIFIC INFORMATION	12
HOW TO USE	13
AFTER USING	14
REMOVING THE LID	14
CLEANING AND MAINTENANCE	14
EARTH WIRE ASSEMBLY	15
EXCHANGE PACKING	16
THE SPECIAL FEATURE	16

Please see the date of manufacture marked on the product
Thank you for your trust in products of Thai City Electric Co., Ltd.
In order to use electric jar pot in efficiency way. Please read the
instructions manual carefully before using this appliance.

USAGE PRECAUTIONS

Please read the warning and cautions carefully before
using this appliance and comply strictly for your own safety
and to prevent the damage that may occur on your property.

WARNING

- 1 Before connect the magnetic plug to body
examine if anything stuck with it, remove
before plugging.
- 2 Insert the plug into the wall outlet firmly
and when disconnecting, hold the plug
and pull it out without touching the
power cord.
- 3 Do not immerse the set in water, it may
cause electric leakage or damage of the
electric jar pot.
- 4 Do not put ice cubes or pour milk, mineral
water, tea liquor or other liquid into the
inner pot other than water for use. The
pipe of the electric jar pot may be clogged.
- 5 Keep out of reach of infants and
children as they get scald when the
electric jar pot is tipped over and hot
water spills out, or when the child suck
at the spout.
- 6 Do not put the electric jar pot on the
edge of table as it may fall down and
cause damage.

CAUTIONS

 
- 1 Do not fill water above the "Full" level,
the water may spill out from the spout
when boiled.
- 2 Do not boil water below the "Refill" level, it may lead to
damage. And some more water to "Full" level.
- 3 Close lid firmly, otherwise hot water outflow so much
when tumbling.

1. The appliance is to be supplied through a residual current device (RCD)
having a rated residual operating current not exceeding 30 mA.
2. This appliance is considered to be suitable for use in countries having a
warm damp equable climate. It may also be used in other countries.

- 7 Do not put the electric jar pot on a wet
floor, under direct sunlight or near the
gas stove.
- 8 Do not cover the steam outlet with a towel etc.
Otherwise the hot water may spill over or the
share of the lid may change.
- 9 Do not pour hot water while boiling because
splashing hot water may cause burn.
- 10 Do not touch the steam outlet with your hand may cause burn.
- 11 In case the power cord is broken, it must be replaced with
specialized power cord or the standard power cord made by
manufacturer or appointed service providers.
- 12 Do not disassemble or repair the electric jar pot by yourself.
It may cause trouble such as a fire or electric shock.
Consult your nearest dealer.
- 13 Never connect the plug with your wet hand as it may be
dangerous from electric leakage.
- 14 This appliance is intended to be used in household and similar
applications such as
- Staff kitchen areas in shops, offices and other working
environments;
- Farm houses;
- By clients in hotels, motels and other residential type
environments;
- Bed and breakfast type environments.

- 4 Do not opening the lid when during boiling because touched
hot steam.
- 5 Often examine the power supply cord, the defective power
supply cord or plug may cause burning fire or electric shock.
- 6 Move the electric jar pot by handle only.

DESCRIPTION OF PARTS

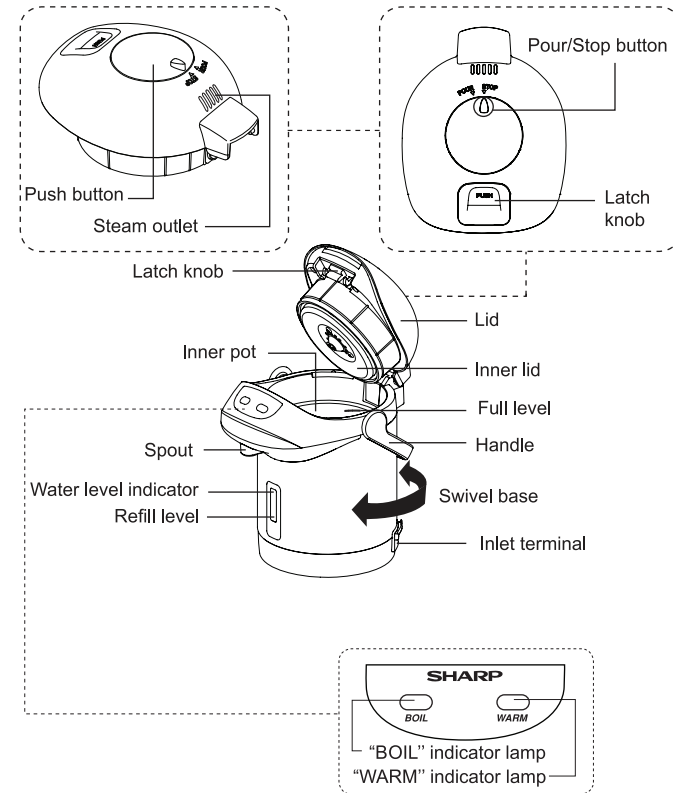

SPECIFIC INFORMATION

MODEL	KP-B16S	KP-B28S	KP-B36S
Capacity (Max.) (ℓ)	1.6	2.8	3.6
Rated voltage (V)	220		
Rated frequency (Hz)	50		
Power consumption (W)	610	670	
Electric current (A)	2.77	3.05	
Pouring system	Manual air pressure operation		
Outside dimension (W x H x D) (mm.)	202 x 301 x 258	202 x 383 x 258	202 x 439 x 258
Weight (kg)	1.6	1.8	1.9
IP number	IPX0		

* Detail is subject to change without prior notice.

HOW TO USE

Be sure that the rated voltage is 220V only before use.

For the first use, boil water and pour out by pushing down the push
button many times to let hot water out through spout. Then pour out
the remaining water, carefully clean inner pot and lid.

Fill the inner pot with water

- 1 Set the Pour/Stop button at "STOP"
position.
- 2 Pushing the latch knob to open the lid.
- 3 Pour water within the range of "Full" level
and do not splash water to the body.
- 4 Push down the lid until a "click"
sound is heard.

Boiling water and keeping warm

- 1 Connect the magnetic plug to body.
(Be sure that it is firmly connector)
- 2 Insert the other end of the plug into
the wall outlet.
- 3 When the plug is inserted into the
wall outlet, the "BOIL" indicator lamp
lights up, then electric jar pot starts boiling.
- 4 When boiling is over the "BOIL" indicator
lamp goes off and change to "WARM".
The electric jar pot automatically change over to keep water hot
as long as power is connected. The average temperature
of hot water is 90°C, then gradually goes down to 85°C thus
the "WARM" and the "BOIL" indicator lamp mutually lights up
and go off depending on the thermostat.

Note

- Color of inner pot may be changed depending on water quality.
Use clean water.
- Sounds are emitted during the boiling and warming.
But this is quite normal.

Pour hot water

- 1 Set the Pour/Stop button at "POUR"
position and push down the push
button to pour hot water.
- 2 After pouring hot water, set the Pour/Stop button
at "STOP" position.

AFTER USING

- 1 Disconnect the plug from the wall outlet.
- 2 Rinse the inner pot with water, if the water is left in the inner pot, it
may collect water deposit and cause corrosion.

REMOVING THE LID

- 1 Push the latch knob found in the front part
of the lid, then open the lid up to 60°C
- 2 Shift the lid forward, and lift it up, then it
can be detached.

CLEANING AND MAINTENANCE

When not using the pot for a long period

Rinse the inner pot with water, drain off by placing the body
upside down wipe off moisture in the inner pot well. If the water is left
in the inner pot, it may collect water deposit and cause corrosion.

How to cleaning

Before cleaning, be sure to disconnect the plug, pour out the
remaining water and cool down the body. Do not use polishing powder,
hard brush, thinner, alcohol or other solvent, otherwise the surface may
be damaged or discolored.

 
 
- **Body, lid and handle** soak a soft cloth in water, squeeze properly
and wipe carefully.
- **Inner pot** should be cleaned every week by soaking a sponge with
water. Then rub the inside of the inner pot carefully. Rinse and drain
sufficiently with water.

When the inner pot was discolored due to different water quality

- 1 Mix vinegar with (1:1), pour the mixer water up to the "Full" level
of the inner pot and let it boils.
- 2 After boiling, let it stand for one hour, then pour out the vinegar.
- 3 Soak a sponge with water and rub the inside of the inner pot carefully.
The rinse thoroughly with water until vinegar smell goes out.
- 4 After cleaning, fill water up to "Full" level and let it boils, then pour out
the water as usual before regular use.

EARTH WIRE ASSEMBLY

- 1 Remove magnetic plug before assembly earth wire.
- 2 Remove the screw for earth wire about 2-3 mm. (Symbol ⊕)
and insert earth wire assembly and fasten washer for earth wire.

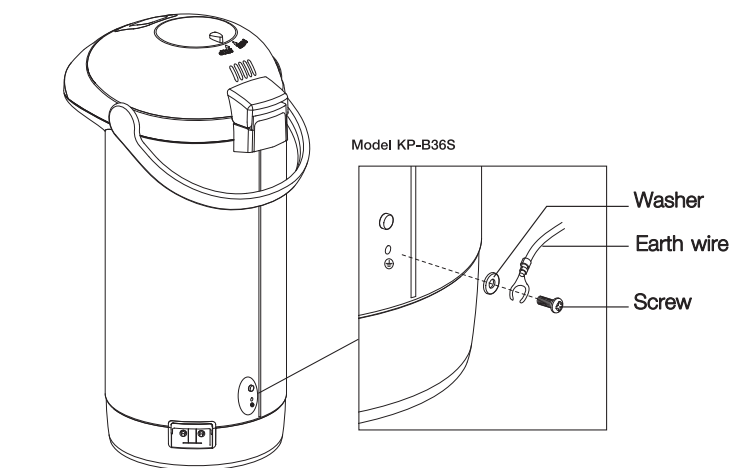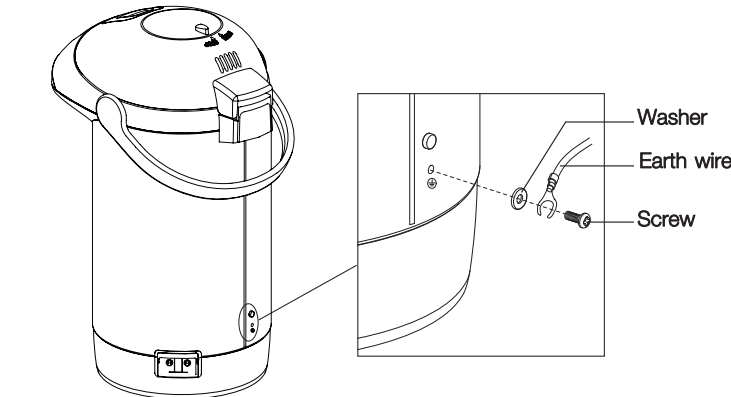

- For safety, please connect ground wire.
- If the installation of ground system is required, please contact
electrician or customer service agent.
- Do not connect ground wire to gas pipe, water pipe, telephone line
or lighting conductor.

EXCHANGE PACKING

- 1 Loosen 3 screws holding the inner lid.
- 2 Pull the inner lid packing off from the inner lid.
- 3 Renew the inner lid packing, be sure of the proper side that fits
the inner lid
- 4 Assembled in the same manner that you removed.

Note

Inner lid packing has a life-time of use. When it is over, pouring water out
may be impossible. Inner lid packing exchange is a service.

THE SPECIAL FEATURE

- This is a combination of water bottle and warmer, with clean and
sanitary stainless steel construction. The water volume can be checked
at a glance on the easy-to-read water level indicator.

MANUFACTURED BY FEDERAL ELECTRIC CORP., LTD.
64/1 Moo 4 Kingkaew Rd., Rajatheva, Bangploe, Samutprakarn 10540

THAI CITY ELECTRIC THAI CITY ELECTRIC CO., LTD.
1643/4 New Petchburi Rd., Makasan, Ratchathewi, Bangkok 10400
Tel: 0 2353 3111 Call Center 0 2254 5000
E-mail : callcenter@thaicity.co.th

คิดบวก ทำบวก
เพื่อเด็กฯ และสังคมไทย
WWW.THAICITYSOCIALLY.COM

www.thaicity.co.th
www.sharp-weedclub.com
www.facebook.com/sharpweedclub